

tool tote


# Sawhorses

## Materials & Hardware

A	Ends (2)	$\frac{3}{4}$ x 9 - 16 $\frac{3}{4}$	
B	Bottom (1)	$\frac{1}{2}$ x 9 - 21	
C	Sides (2)	$\frac{1}{2}$ x 6 $\frac{1}{4}$ - 22	
D	Feet (4)	$\frac{3}{4}$ x 2 $\frac{1}{2}$ - 8 $\frac{1}{2}$	
E	Stops (2)	$\frac{3}{4}$ x $\frac{3}{4}$ - 5	
F	Tray Sides (2)	$\frac{1}{2}$ x 2 - 20 $\frac{1}{2}$	
G	Tray Bottom (1)	4 $\frac{1}{2}$ x 20 $\frac{1}{2}$ - $\frac{1}{4}$ Hdbd.	
H	Tray Dividers (6)	$\frac{1}{2}$ x 4 $\frac{1}{2}$ - $\frac{1}{4}$ Hdbd.	
I	Support Piece (1)	$\frac{3}{4}$ x 4 $\frac{1}{2}$ - 23 $\frac{1}{8}$	
J	Uprights (2)	$\frac{3}{4}$ x 4 $\frac{1}{2}$ - 18	
K	Stiffeners (2)	$\frac{1}{2}$ x 2 - 23 $\frac{1}{8}$	

- (4)  $\frac{1}{4}$ " x 1 $\frac{1}{2}$ " Carriage Bolts
- (4)  $\frac{1}{4}$ " Lock Nuts
- (4)  $\frac{1}{4}$ " Washers
- (2)  $\frac{3}{8}$ " T-Nuts
- (2)  $\frac{3}{8}$ " Washers
- (2)  $\frac{3}{8}$ " x 1 $\frac{1}{2}$ " Studded Knob
- (4) #8 x 1 $\frac{1}{4}$ " Fh Woodscrews
- (4) #6 x 1" Fh Woodscrews

\*(Material and Hardware for one (1) Tote)

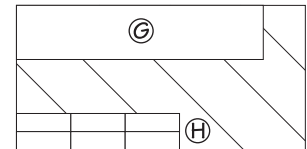

12" x 24" -  $\frac{1}{4}$ " HARDBOARD

