

## Knock-Down Workstation Accessories

### Materials

#### WORKSURFACE

- A Assembly Top (1) 31 1/2 x 63 1/2 - 3/4 Ply.  
 B Cleats (4) 1 x 63 1/2 - 3/4 Hdwd.

#### SACRIFICIAL SUPPORTS

- C Panel Support Blocks (6) 1 1/2 x 3 1/2 - 31 1/2  
 D Support Block Cleats (24) 3/4 x 1 - 31 1/2

#### MITER SAW STATION


- E Miter Saw Platform (1) 24 x 24 - 3/4 Ply.  
 F Outfeed Base (2) 6 x 21 3/4 - 3/4 Ply.  
 G Platform Cleats (4) 1 x 24 - 3/4 Hdwd.  
 H Outfeed Cleats (4) 1 x 6 - 3/4 Hdwd.  
 I Outfeed Supports (2) 1 1/2 x 3 1/4 - 20 1/4

#### PLANER PLATFORM


- J Planer Base (1) 19 x 21 3/4 - 3/4 Ply.  
 K Base Corner (4) 5 x 5 - 3/4 Ply.  
 L Outfeed Base (2) 6 x 21 3/4 - 3/4 Ply.  
 M Base Cleats (2) 1 x 19 - 3/4 Hdwd.  
 N Outfeed Cleats (4) 1 x 6 - 3/4 Hdwd.  
 O Outfeed Supports (2) 1 1/2 x 2 5/8 - 20 1/4

#### TABLE SAW PLATFORM

- P Platform (1) 25 1/2 x 30 1/2 - 3/4 Ply.  
 Q Outfeed Base (1) 12 x 30 1/2 - 3/4 Ply.  
 R Outfeed Top (1) 12 x 30 1/2 - 3/4 Ply.  
 S Outfeed Sides (2) 9 1/4 x 11 1/4 - 3/4 Ply.  
 T Outfeed Front (2) 6 x 11 1/4 - 3/4 Ply.  
 U Outfeed Mounting Cleat (2) 2 x 9 1/4 - 3/4 Ply.  
 V Platform Corners (4) 5 x 5 - 3/4 Ply.  
 W Base Cleats (2) 1 x 25 1/2 - 3/4 Ply.  
 X Outfeed Cleats (2) 1 x 12 - 3/4 Ply.

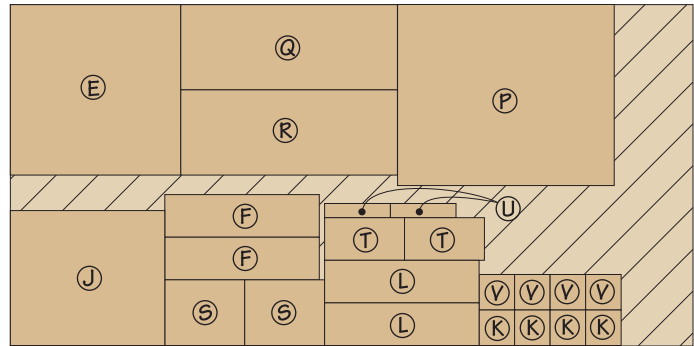

48" x 96" - 3/4" PLYWOOD

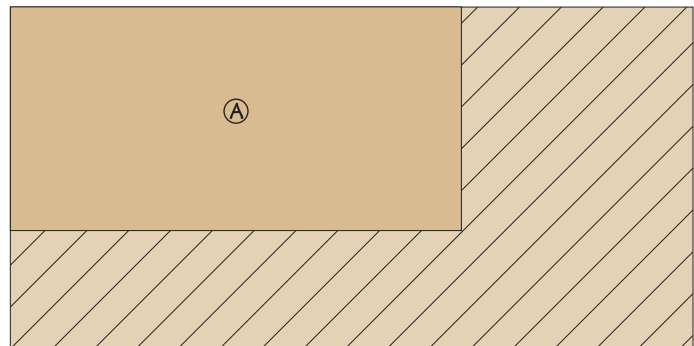

48" x 96" - 3/4" PLYWOOD




1 1/2" x 3 1/2" - 96" HARDWOOD




1 1/2" x 3 1/2" - 96" HARDWOOD



1 1/2" x 3 1/2" - 96" HARDWOOD



3/4" x 5 1/2" - 96" HARDWOOD



3/4" x 3 1/2" - 96" HARDWOOD